

Cleaning the Air Filter and Vent

Your projector includes an air filter to ensure the best performance. If dust collects on the air filter or vent, clean them as described below. Dust clogs prevent proper ventilation and can cause overheating and damage the projector.

If you see the following message, clean the air filter immediately.

The projector is overheating. Make sure nothing is blocking the air vent, and clean or replace the air filter.


1. Turn off the projector. Wait for the P power light to stop flashing, then unplug the power cord.
2. To clean the intake vent and filter, use a small vacuum cleaner designed for computers and other office equipment. If you don't have one, gently clean the vent with a soft brush (such as an artist's paintbrush).

note

To order replacement air filters, request part number V13H134A22. See page 13 for ordering information.

You can remove the air filter to clean both sides. For instructions, see page 110.

The exhaust vent is on the other side of the projector


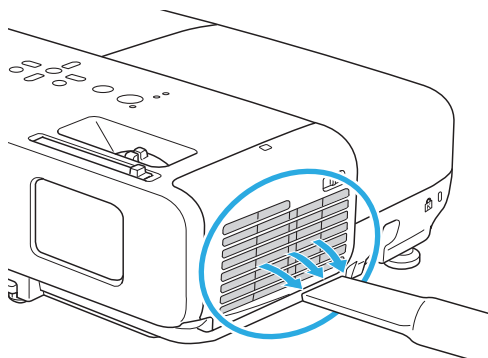


3. If the dirt is difficult to remove or the filter is damaged, or if the message appears again after cleaning replace the filter as described on page 110. Contact your dealer or call Epson at 800-GO-EPSON (800-463-7766) to purchase a new filter.


Replacing the Air Filter

If the filter is difficult to clean or damaged, or if the overheating message appears after cleaning, you need to replace the filter. Contact your dealer or call Epson at 800-GO-EPSON (800-463-7766) to obtain a new filter.


1. Turn off the projector.
2. When the P power light stops flashing, unplug the power cord
3. Open the air filter cover by sliding the switch and pulling down the cover.

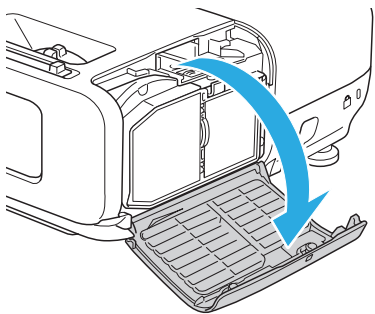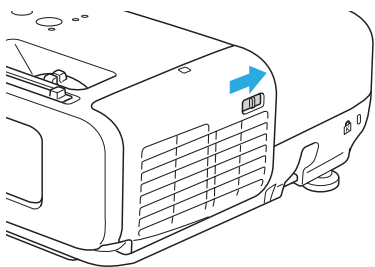

4. Grasp the tab and pull the filter straight out.

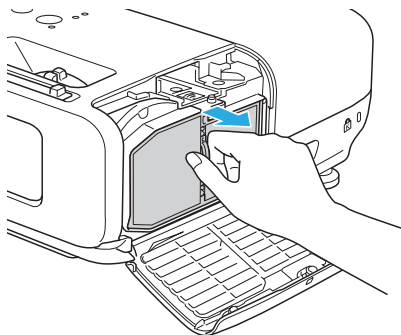

5. Press in the new air filter until it clicks in place.

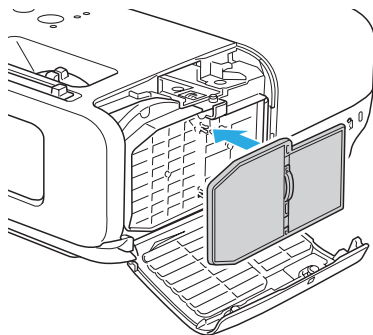

6. Close the air filter cover.